

DC-TO-AC INVERTER

1786-24-120-60-P
1786-48-120-60-P
1786-130-120-60-P

USER'S INFORMATION



SERIES 1786
1000VA DC-TO-AC INVERTER
WITH NETWORK COMMUNICATIONS INTERFACE

USER'S INFORMATION

This User's Information manual is applicable for the following Models:

1786-~~24~~-120-60-P
1786-~~48~~-120-60-P
1786-**130**-120-60-P

All information contained in this document is the property of Wilmore Electronics Company, Inc. The providing of this document to any person or organization external to Wilmore shall in no way be construed as a license or as permission to use this information for any purpose other than to facilitate the use and maintenance of Wilmore equipment.

WILMORE ELECTRONICS COMPANY
607 U.S. 70A East
P.O. Box 1329
Hillsborough, N.C. 27278

Telephone: (919) 732-9351

Fax: (919) 732-9359

www.wilmoreelectronics.com

This User's Information manual provides general guidance regarding the installation and operation of this dc-to-ac power inverter, along with maintenance, warranty and contact information. It does not discuss features, programming and connectivity of the inverter's Network Communications Interface. For complete information on the setup and use of this feature...

Please Download the
**INVERTER NETWORK COMMUNICATIONS
INTERFACE User's Information Manual** at

<https://wilmoreelectronics.com/support/#DOWNLOAD>

(Simply locate the appropriate model number for this inverter from the list and select it.)

WARNING - DANGER OF ELECTRIC SHOCK!

Hazardous voltages can be present on the rear-panel wiring terminals and receptacles. Disconnect the DC input power at the source end of the input cables before working near the rear panel.

The installer should read all of Section II (Installation and Operation) and refer to Figure 1 for additional information **BEFORE MAKING ANY CONNECTIONS TO THE INVERTER.**

CAUTION - TO AVOID EQUIPMENT DAMAGE DURING INSTALLATION...

Prior to installing the inverter, verify that its front-panel input power switch (a “rocker-arm” circuit breaker) is in the OFF position, indicated by a wedge-shaped section of the rocker arm protruding from the front panel and exposing white plastic in the rocker assembly. If the inverter does not appear to be turned off, push against the word “OFF” printed on the switch face to expose the white plastic indicator before making any connections to the inverter.

...DO NOT “HOT PLUG” OR APPLY AN ENERGIZED CONNECTION TO A “TURNED ON” INVERTER!

I. GENERAL DESCRIPTION

The Series 1786 dc-to-ac inverters provide a regulated, 120-Vac, frequency-stable 60-Hz sine-wave output from station batteries and other widely-fluctuating battery systems. Maximum rated output power is 1000 volt-amperes (continuous duty rating at 50°C ambient temperature). The dc input and the ac output are galvanically isolated from the chassis and from each other.

This inverter is electronically protected against output overloads (including short-circuits) and input under-voltages. Recovery to normal inverter operation is automatic upon removal of the fault. A front-panel circuit breaker provides protection against accidental reversal of dc input polarity during installation.

A Network Communications Interface allows the user to monitor several key aspects of the inverter's operation via a web interface, SNMP (Simple Network Management Protocol), or serial terminal port (see the separate Inverter Network Communications Interface user's information manual for additional information, available from Wilmore's website at <http://www.wilmoreelectronics.com/support/downloads.html>)

II. INSTALLATION AND OPERATION

WARNING – DANGER OF ELECTRIC SHOCK

Hazardous voltages can be present on the rear-panel wiring terminals and receptacles. Disconnect the DC input power source end of the input cables before working near the rear panel.

The installer should read all of Section II (Installation and Operation) and refer to Figure 1 for additional information BEFORE MAKING ANY CONNECTIONS TO THE INVERTER.

Connection and operation of Series 1786 inverters are almost entirely self-explanatory from the front and rear panel markings on each unit.

All electrical connections to the inverter are located on the rear panel. The **DC INPUT** power connections are made via a two-part (i.e. header and plug) connector. Input cabling can be connected to the inverter without separating the plug from the header. Alternately, the plug may be removed from the inverter by disengaging its mounting-flange screws, and the cabling can be connected to the plug prior to re-engaging it with the header on the inverter's rear panel (be sure to re-engage the mounting-flange screws as well). The positive and negative terminals on each power connector are clearly marked, and deliberate caution should be

exercised to avoid polarity mistakes. To connect the power cables, simply strip 3/8” – 1/2” from one end of each cable and insert into the appropriate connector wire clamp. Tighten the wire-clamp screw securely and, if using stranded wire, check to make sure that all wire strands have been captured by the wire clamp.

Suggested wire sizes for dc-input cabling are shown in the chart below. It is desirable that these cables be kept as short as possible, and, if their length must exceed 10 feet, it may be desirable to use larger diameter (lower gauge) cables.

Model Number	Input Voltage Range (Vdc)	Input Current (Adc)*	Suggested Cable (AWG)
1786- 24 -120-60	21-29	53.5	#6
1786- 48 -120-60	42-58	26.0	#8
1786- 130 -120-60	105-145	10.2	#12

*Typical at full load and minimum input voltage.

Note that these inverters are constant-output-power devices, i.e., with a constant output load, the dc-input current and dc-input voltage are inversely proportional. This means that the maximum input current is drawn at the minimum input voltage.

The **AC OUTPUT** receptacles provide power to the user’s load. The **CHASSIS GROUND** screw provided on the rear panel is electrically common with the ground connection on the AC OUTPUT receptacle.

Good installation practice for power conversion equipment dictates that an input fuse or circuit breaker should be located at the power-source end of the cables feeding the equipment. The type and rating of such devices are largely dependent on local and/or national codes and installation variables such as cable routing and wire gauge. Wilmore cannot anticipate these variables and consequently does not recommend specific fuse or circuit breaker values. However, it is important to note a few operating characteristics of this unit that may affect an installer’s choice of protection devices.

1) As mentioned previously, this unit is a constant-power device; that is, it draws its maximum input current at its minimum input voltage.

2) As with essentially all electronic equipment with significant input capacitance, the unit will draw an initial peak current many times its normal operating current for a very brief period (a few milliseconds or so) when power is initially applied. Consequently, instantaneous-trip circuit breakers or non-time-delay fuses may be activated by normal power-up events and are not recommended.

3) This unit is capable of providing output current well beyond its continuous-duty rating for brief periods in order to power loads with high start/surge currents (e.g. small motors). Consequently, it will draw proportionately higher input current during such peak power demands, and the installer's choice of input protection devices should take this into account. Moreover, and even though the user's application may only require a fraction of its full power rating, the unit may briefly draw this higher current at start-up when the unit is charging its output filter capacitors and/or the load's input filter capacitors (effectively placing a temporary overload on the unit's output). This time period may be much longer than the few milliseconds required to charge the input capacitors as referenced in 2) above. If the user is experiencing nuisance circuit breaker or fuse operation at power-up, please contact Wilmore's customer service group to discuss information about your particular application:

Telephone: 919-732-9351

Email: info@wilmoreelectronics.com

FRONT PANEL CONTROLS / INDICATORS

All models in this series provide a combination circuit breaker and ON/OFF switch on the front panel for **DC INPUT** power. Its rocker handle is flush with the front panel while in the ON position to guard against unintentionally turning the circuit breaker OFF through incidental contact.

AC Panel Meter

The digital power meter on the front panel measures and displays the rms voltage and current, active (real) power and the power factor of the inverter's output.

Basic Operation:

When powering up the inverter for the first time, the meter will perform a self-test routine and then continuously display the inverter's output, measured in ac volts. The display will remain in the **VOLTS** mode as long as the front panel **SEL** (Select) button is not touched.

After the unit powers up to normal operation in the **VOLTS** reading mode, momentarily (approximately one second) touching the **SEL** button three times in succession will cycle the display to **AMPS**, **WATTS**, and **PF** (Power Factor). Momentarily touching **SEL** a fourth time will return the display back to the **VOLTS** reading mode.

Holding the **SEL** button down for 3 seconds will place the unit in a continuous auto-cycling mode, and the display will repetitively scroll through all four measurements, with each measurement remaining displayed for 3 seconds.

When the continuous auto-cycling mode is initially selected, the meter will briefly display **Auto On** before continuous cycling begins. Momentarily touching the **SEL** button again will cause the unit to briefly display **Auto OFF** before it returns to the fixed **VOLTS** reading mode.


Displaying a Specific Mode on Power Up:

The meter can be configured to automatically show any one of the four display modes upon future applications of ac power. For example, it may be desirable to configure the unit to always power up in the **AMPS** mode.

To set the unit to always read **AMPS** on power up, tap the **SEL** switch until the **AMPS** mode is displayed, and then leave the unit in this mode for at least 60 seconds. As long as the **SEL** switch is not pressed again during the 60 second interval, the unit will configure itself to always power up displaying the chosen mode, which is **AMPS** in this example.

This functionality also applies to the auto-cycle mode. That is, the unit can be configured to always power up in the auto-cycle (scrolling) display mode by following the instructions outlined above.

FIGURE 1. FRONT AND REAR PANELS
(shown without mounting brackets and without dc-input plug attached)

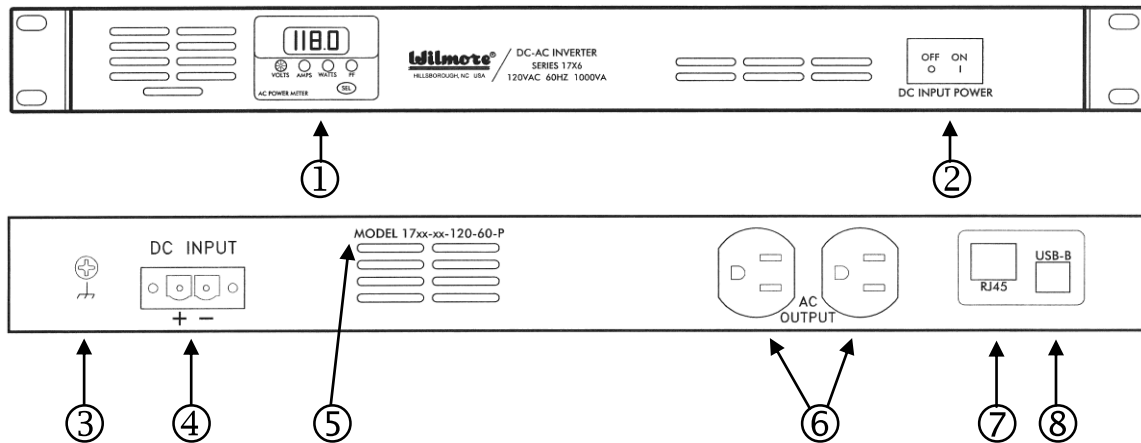

- ① **AC PANEL METER:** This provides various information on the inverter's output status. It can be set to continuously display any of the following: volts, amperes, watts, or power factor. The display can also be set to continuously auto-cycle between each of these. For additional information, see Section II.
- ② **DC INPUT CIRCUIT BREAKER:** This is a combination DC input switch and circuit breaker, provided in the positive (+) input line. It does NOT interrupt the commercial AC line input.
- ③ **CHASSIS GROUND TERMINAL:** Connection to chassis ground is provided for use with #8 hardware.
- ④ **DC INPUT CONNECTOR:** Connections for DC input power are provided via a two-part (plug and header) connector, which accommodates appropriate wire sizes. Please refer to Section II for recommended wire sizes for this inverter.
- ⑤ **MODEL NUMBER:** This is a complete model number of the inverter, including any standard or special factory-assigned modification codes.
- ⑥ **AC OUTPUT RECEPTACLES:** Connections to the AC output power source selected by the internal transfer circuitry (inverter or alternate AC source) are provided via two standard NEMA 5-15R three-prong receptacles. The combined load should not exceed the power rating of the inverter.

(Continued on next page)

- ⑦ **RJ45 ETHERNET PORT:** Used for network connectivity. A properly configured IPv4 Ethernet connection is required to access the web interface, monitor via SNMP (Simple Network Management Protocol), or query the web service API (Application Programming Interface). For additional information, see separate Inverter Network Communications Interface user's information manual, available from Wilmore's website as a download.
- ⑧ **USB 2.0 TYPE B PORT:** Used for initial setup and configuration of the communications interface (requires Wilmore's configuration application). Also allows you to query specific information via the serial terminal console. See separate Inverter Network Communications Interface user's information manual, available from Wilmore's website as a download.

III. MAINTENANCE INFORMATION

Other than preventing dust and debris accumulation on internal components and external surfaces of the inverter, no periodic maintenance should be required.

A damaged or malfunctioning unit should be returned to Wilmore for repair. Multiple-component cascade failures in power conversion circuitry can greatly complicate trouble-shooting procedures, and factory technicians familiar with the circuitry can locate the problem quickly, explore adjacent circuitry for stressed or damaged components, and subject the inverter to a thorough retest.

Wilmore maintains a **Return Material Authorization** system in order to efficiently track your inbound shipment and expedite its repair and return to you. Before shipping material for repair to Wilmore, please call (919) 732-9351 or email info@wilmoreelectronics.com and request an **RMA Number** for your shipment. If possible, please provide the complete model number of the equipment, its serial number, and a brief description of the problem. Place this **RMA Number** on the outside of the package and ship prepaid to:

WILMORE ELECTRONICS CO., INC.

607 U.S. 70A East

P.O. Box 1329

Hillsborough, NC 27278

LIMITED WARRANTY

Wilmore Electronics Company, Inc. warrants this product to be free from defects in material and workmanship for one (1) year after delivery to the original purchaser. During this period, a defective product for which an authorization to return the product has been given, shall be returned to Wilmore freight prepaid. The products will be repaired, replaced, or credit allowed only if the defect, after examination by Wilmore, is determined to be a defect in material or workmanship. If this returned product is determined by Wilmore to have suffered from user misuse or abuse or to have been opened or modified without written instructions from Wilmore, or if the date of receipt of a request for return authorization exceeds the 1-year warranty period, the warranty is null and void. In such cases, Wilmore will determine the cost of repair, quote this price to the purchaser, and continue as advised by the purchaser.

The sole obligation of Wilmore and the purchaser's exclusive remedy under this or any other warranty, expressed or implied, is the repair or replacement of a defective product as provided above, or the issuance of credit in an amount not to exceed the contract price for the product deemed to be defective. Wilmore makes no warranty of merchantability or fitness for a particular use. Wilmore shall not be responsible for incidental or consequential damage, whether or not foreseeable, caused by defects in this product. There are no other warranties which shall extend the description above.